


STEERING DAMPER – STEERING BOX

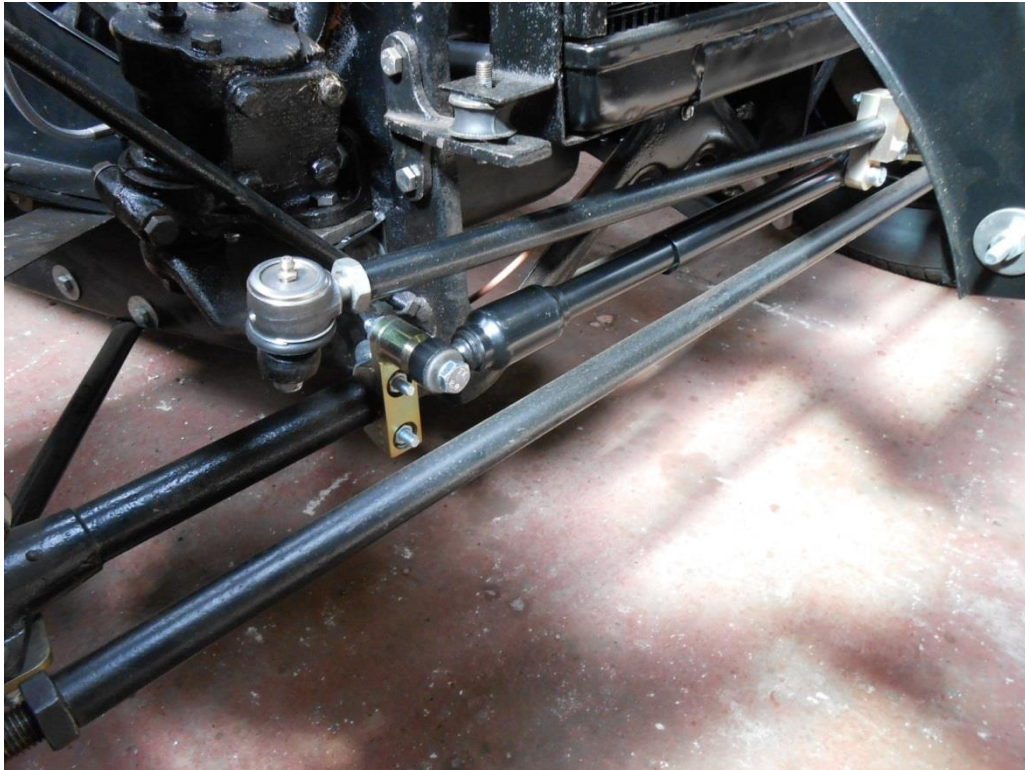

ATTACH THE CLAMP WITH U BOLT AROUND THE LOWER CROSSHEAD TUBE.
PUT THE STEERING IN STRAIGHT AHEAD POSITION.
SET THE DAMPER LENGTH CENTRE TO MID POSITION, 17" (430MM) AND
ATTACH THE SPLIT CLAMP TO THE STEERING TUBE.
TURN THE STEERING FULL LOCK AND CHECK EVERYTHING IS CLEAR.